



Fast Fold Screen Installation Guide

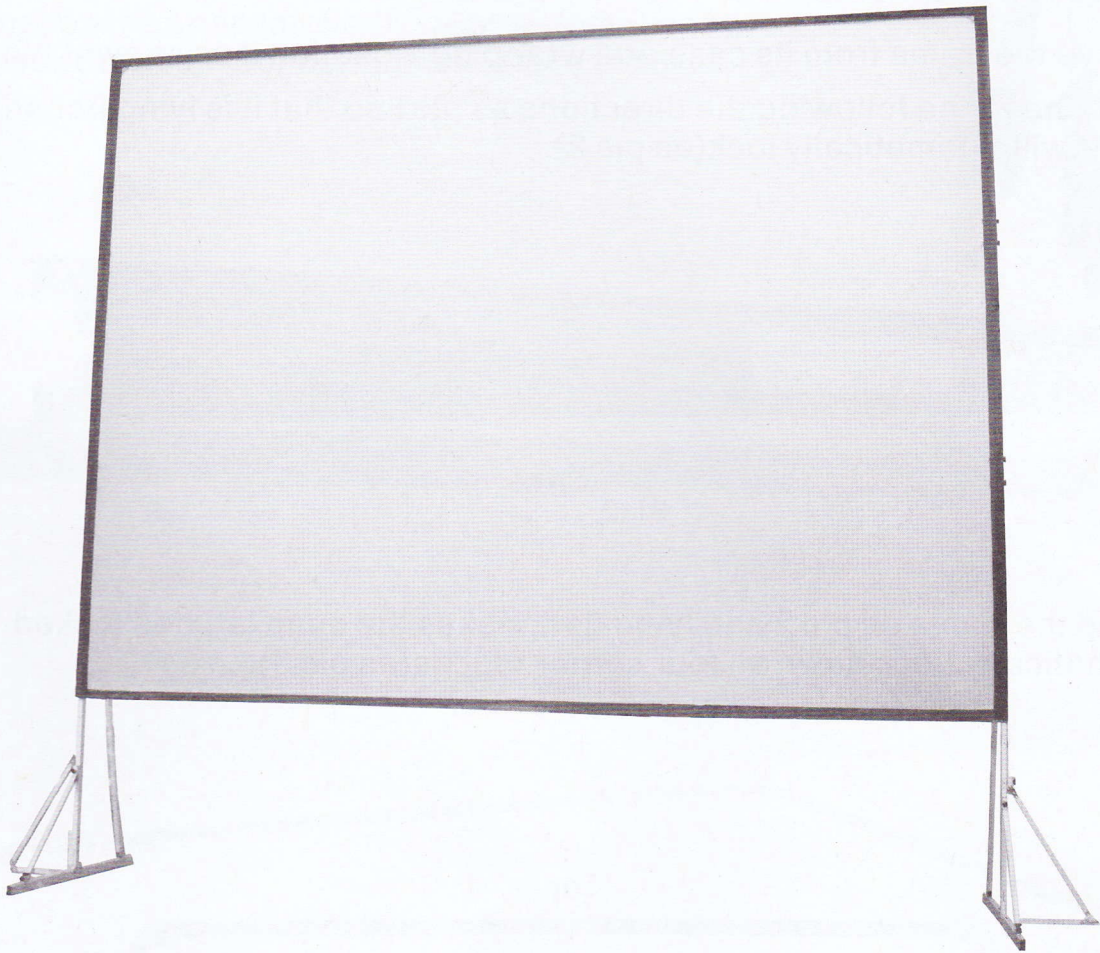

Please always follow the instruction on the installation guide in assembling and usage.

Procedure


Frames and legs are made of 36*36mm hard aluminum tubing with an anodized finish and electrophoresis. With proper care they will provide many years of use. Please follow the set up instructions below.

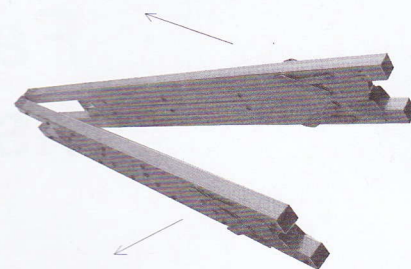

pic1


Two Section Frame

1. Remove the frame from its case and wrapping. Position it as shown (pic1).
2. Unfold the frame following the directions as pic1 so that it is lying flat, snap latches will automatically lock (as pic 2).

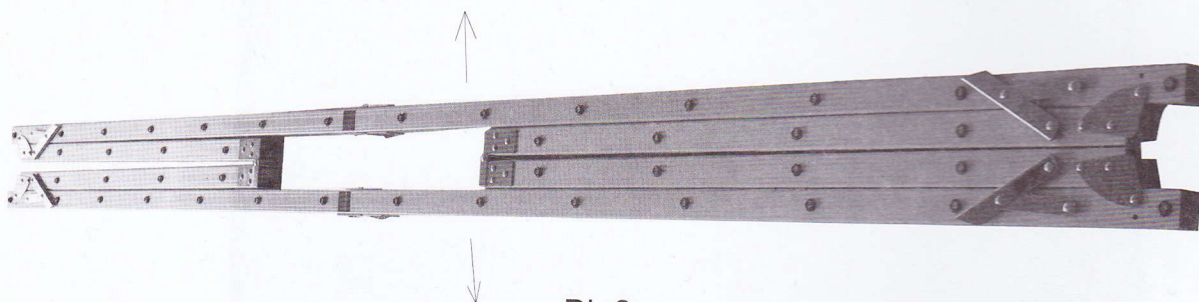

Pic2


3. Unfold the frame as pic 2 and lying flat., makes the snap latched locked automatically. Lock down all four corner braces (as pic 3).

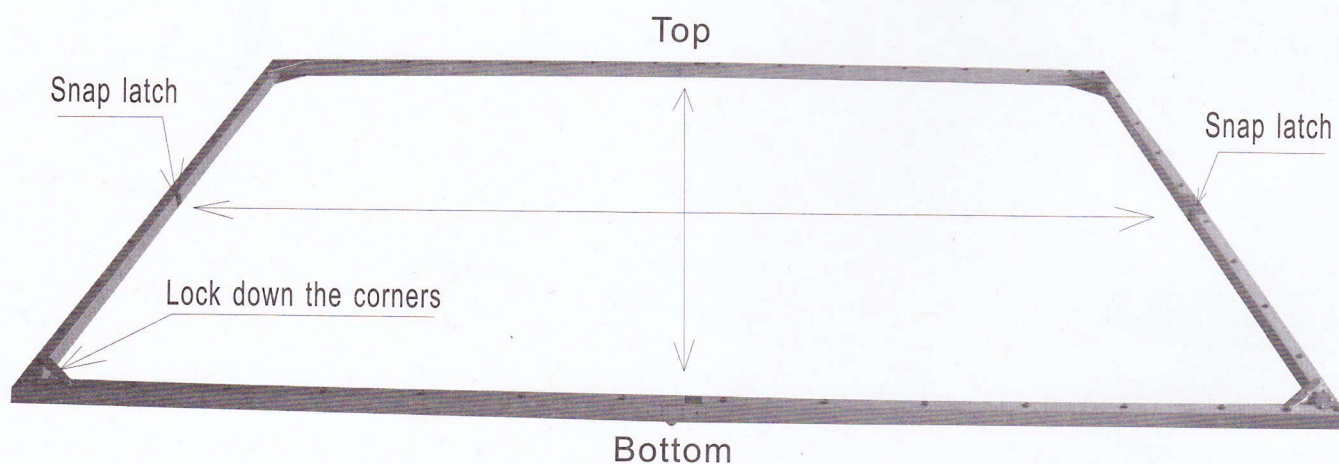

Pic3

Three Section Frame


1. Remove the frame from its case and wrapping.
Position it as shown(pic4).
2. Unfold the frame following the directions as pic4 so that it is lying flat, snap latches will automatically lock(as pic 5).
3. Unfold the frame as pic 2 and lying flat, makes the snap latched locked automatically. Lock down all four corner braces(as pic 6).

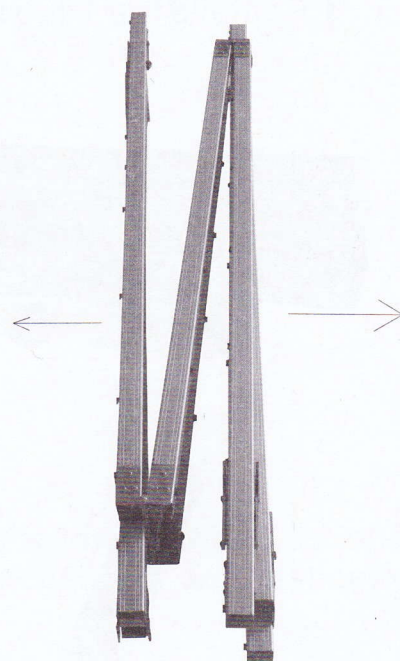

Pic4




Pic5

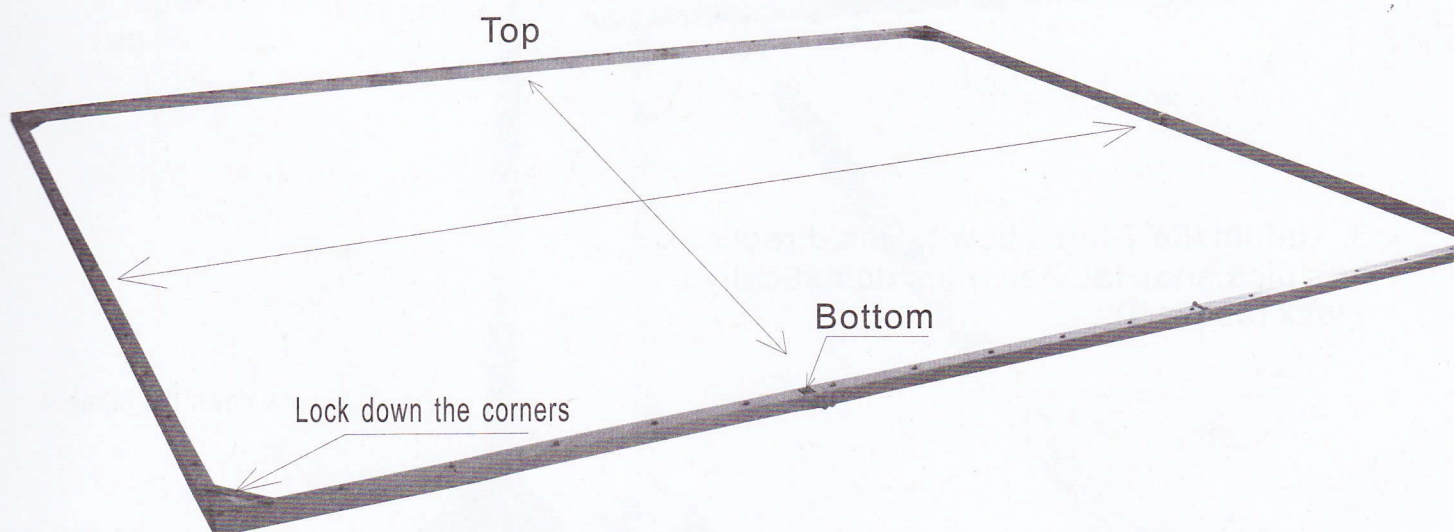


Pic5

Standard T-Leg


1. Remove the T-leg from its case and wrapping. Position it as shown (pic7).

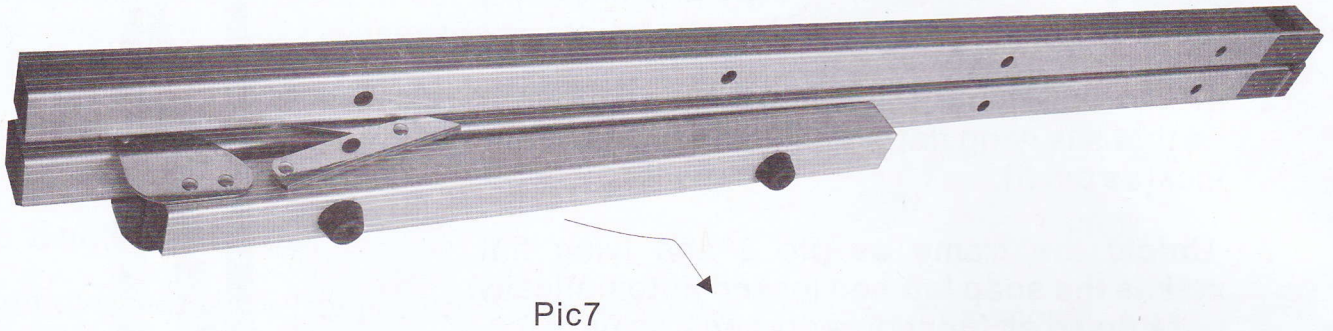

2. Unfold the T-leg following the directions as pic 7, lock down all four corner braces (as pic 8).

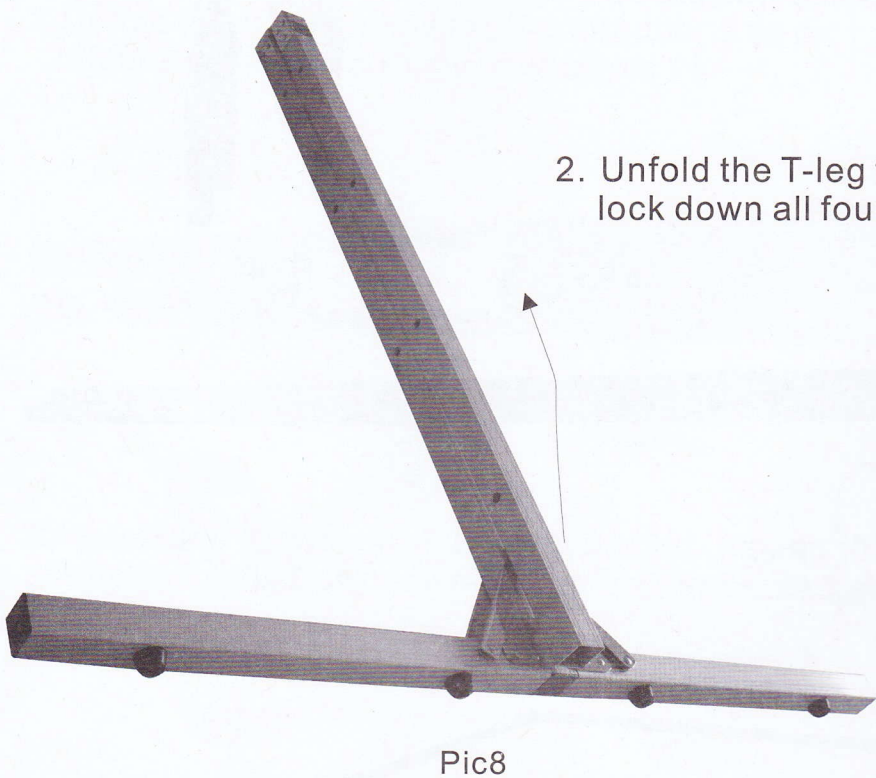


3. Unfold the T-leg following the directions as pic8, snap latches will automatically lock (as pic 9).

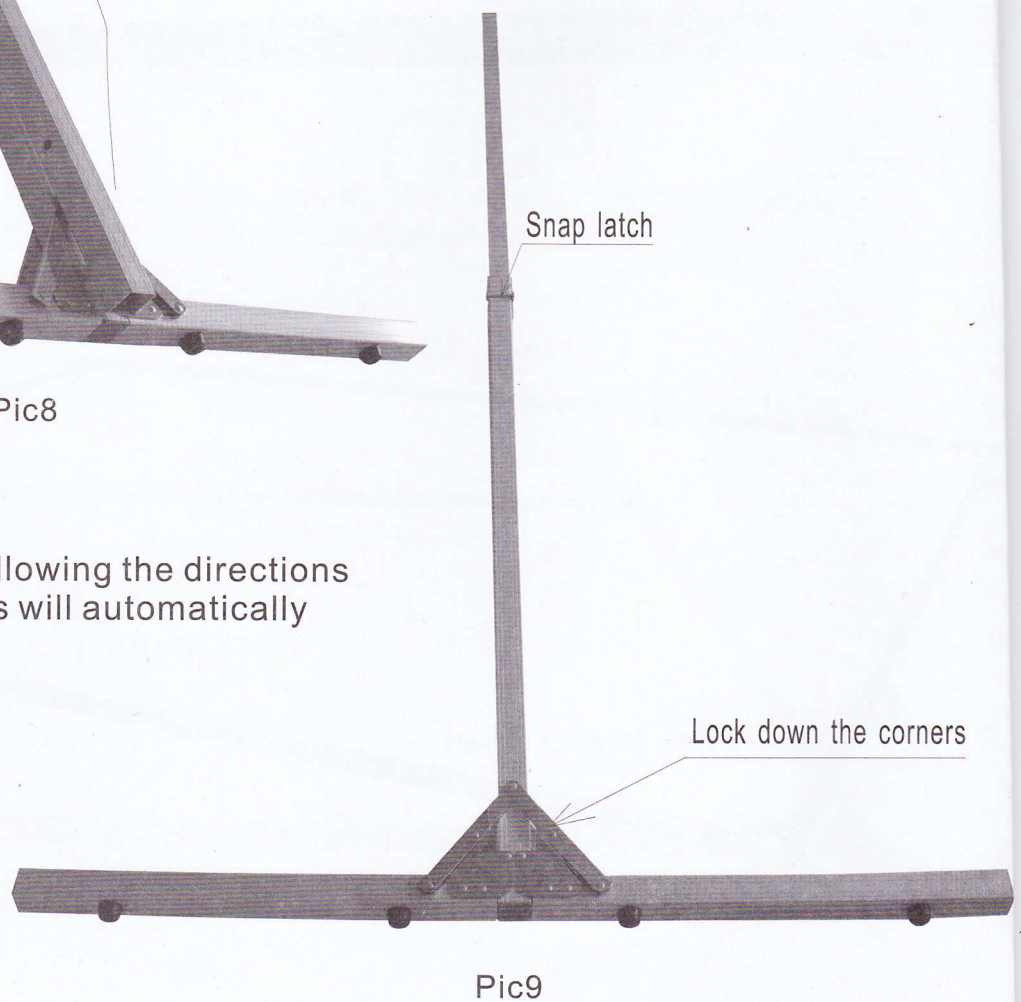


AT-Leg (For added stability on size 150" and over)


1. Remove the AT-leg from its case and wrapping. Position it as shown (pic10).

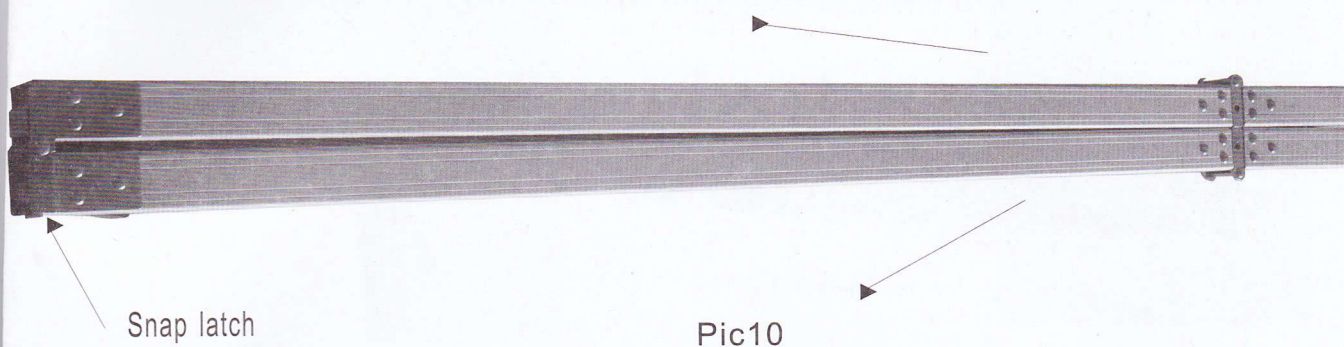

2. Unfold the T-leg following the directions as pic 10, snap latches will automatically lock (as pic11).

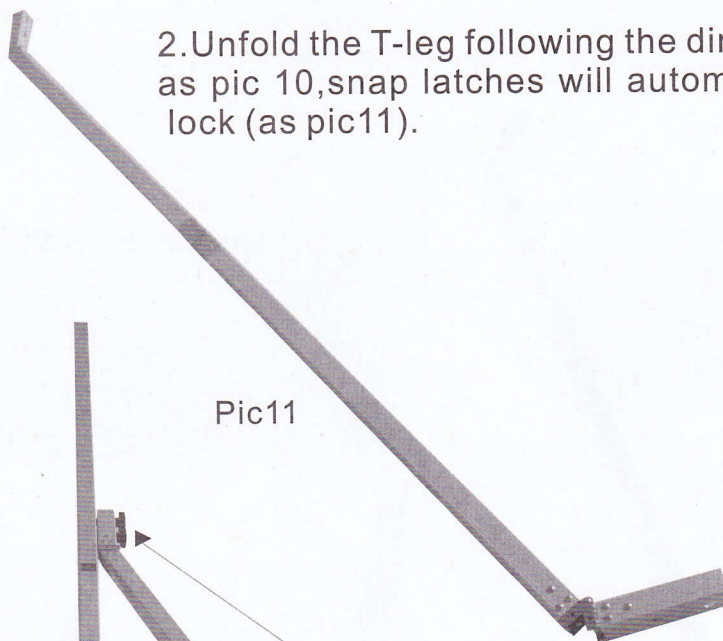


3. Attach AT-leg to T-leg using 4 speedy cranks per leg (as pic 12).

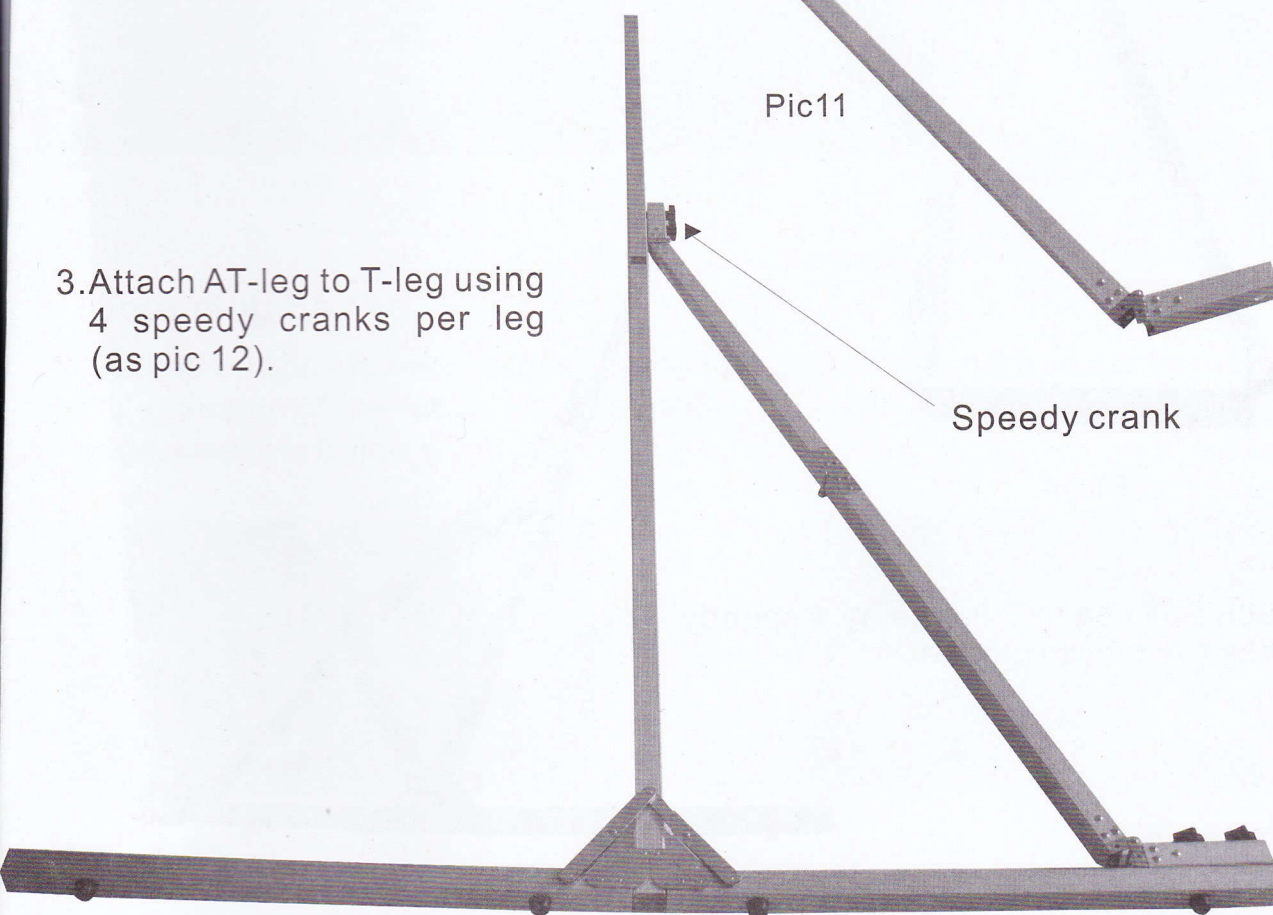

Pic13


SAT-Leg (For added stability on size 180" and over)

1. Remove the SAT-leg from its case and wrapping(as pic13).

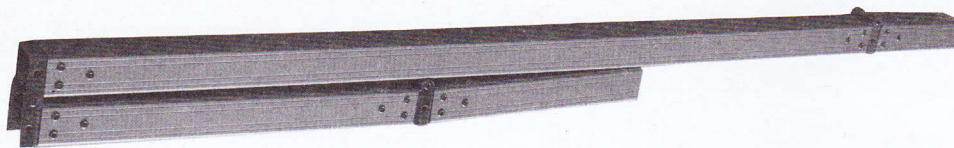


Pic13

2. Unfold the SAT-leg (as pic 14).

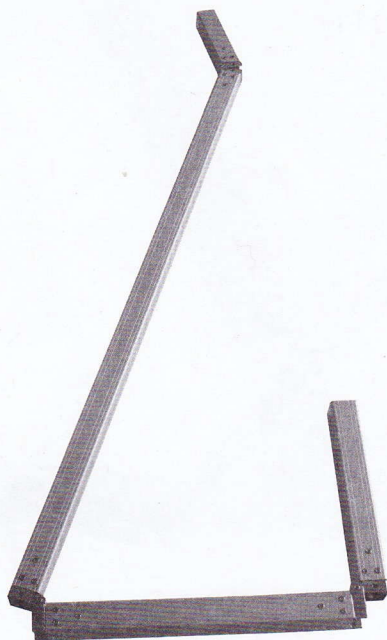

Pic14


3. Attach SAT-leg to T-leg using 4 speedy cranks per leg(as pic 15).

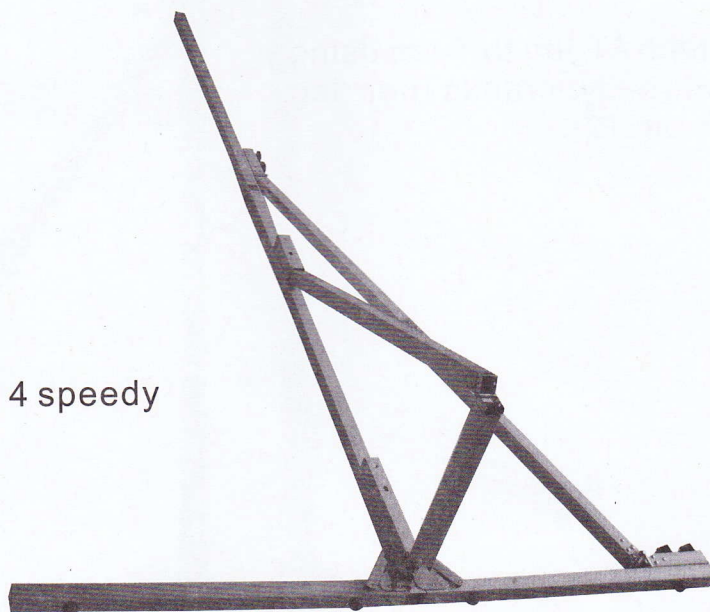

Pic15


Stability of frame and leg

1. Attach leg to each side of frame using at least 4 speedy cranks per let as below.

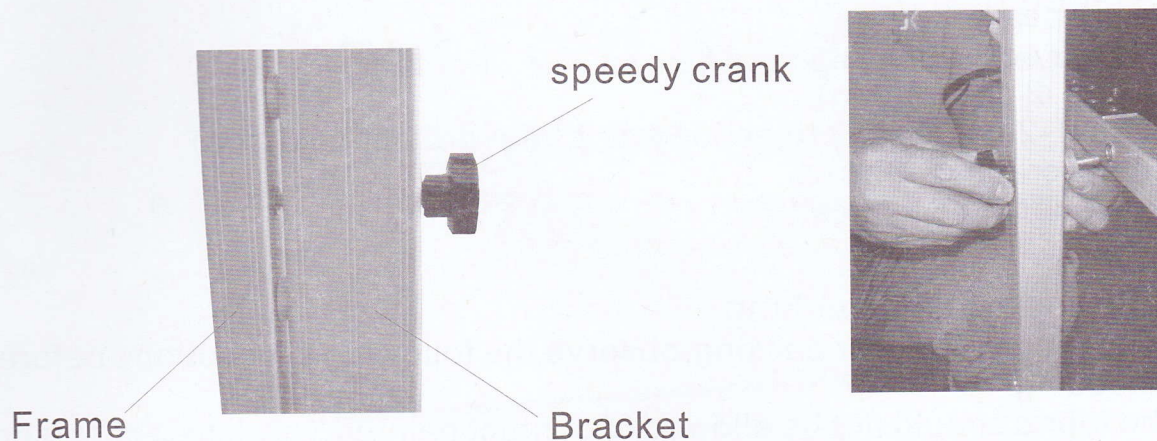


2. Height adjustment: Height is adjustable in 15cm either up or down, Normal screen height is 112.5cm from the frame to the floor.

3. To fold the frame, unlock four corners braces. Push the snap latch buttons and fold the frame (as below).

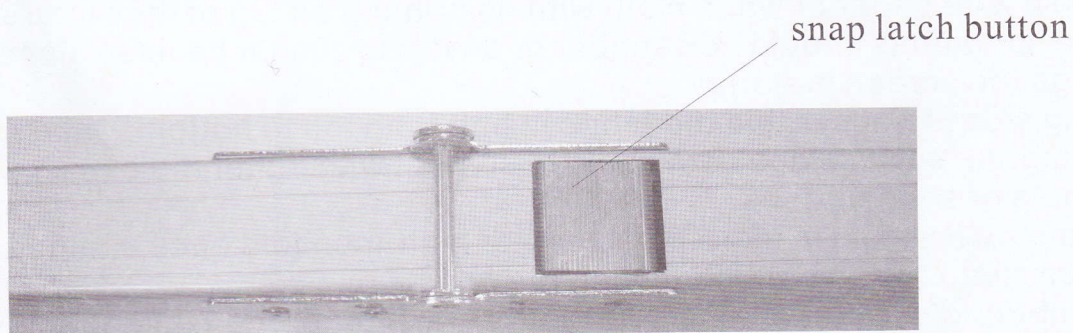

Unfolding Fabric

1. Put the buttons in four corners of the fabric to the corners of the frame. (The tension of the fabric would support the connection of the fabric to the frame)(as below).

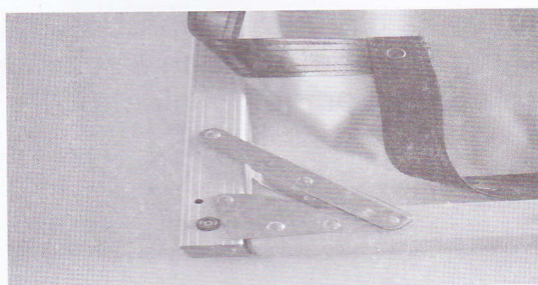

Note: When unfold the fabric, keep away from anything with sharp-angled Or rigid. Please put clean cloth or paper under the fabric to avoid dirty.